


# AdBlue® IBC user instructions



## On delivery the IBC looks like this:

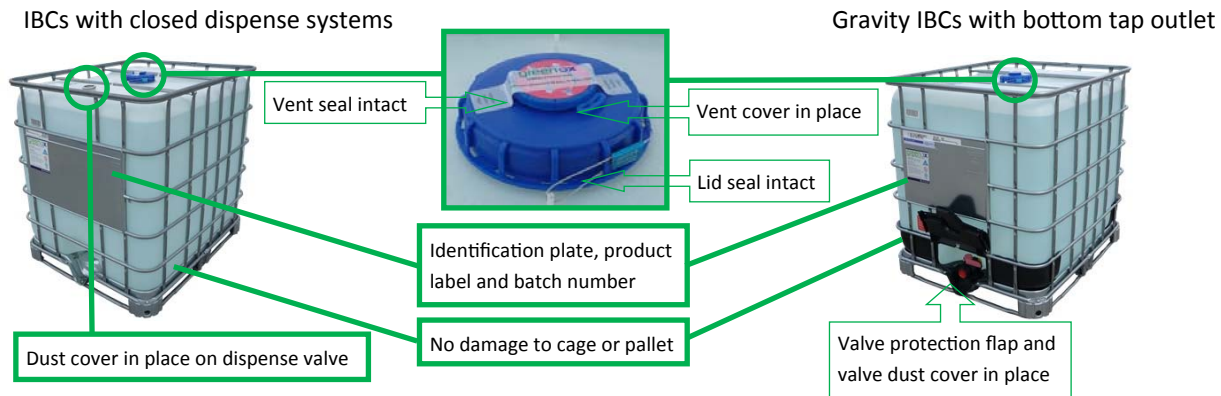

## Using the IBC:

### CDS type IBCs



1. Remove the 2" valve dust cap & dispose of

### Micromatic IBCs



2. Attach suction connector from pump



3. Dispense AdBlue®



### Gravity IBCs

1. Lift valve protection flap and remove the secondary closure/cap (this needs to be replaced prior to return)



2. Attach gravity kit & dispense AdBlue®



## Returning the IBC:

All centre lid seals should be intact and no substantial damage to the IBC frame, base, inner tank or dispense fittings. The following are unacceptable:



Broken base



Broken/missing lid seal



Lid vent tampered



Dispense valve broken



Identification plate missing



Cage bent/damaged



Contamination

## Handling IBCs:

- ✓ Only lift IBCs with a forklift or pallet truck
- ✓ Use equipment designed for use with AdBlue® and made from stainless steel or compatible plastics
- ✓ To avoid contamination, dispense directly to the vehicle rather than into e.g. jugs or cans
- ✗ Never lift by the metal cage or top bars
- ✗ Don't push or shunt the IBC along the ground or drop from height
- ✗ Never open IBCs to atmosphere, insert dip tubes or modify the IBC